Instructions For Fitting the Door Handle to Your Staycold Unit

TRUST THE EXPERIENCE

Please follow the steps below that guide you on how to fit the door handle supplied with your Staycold hinged door unit.

Step 1

Identify the parts:
1) Door handle 2) M3 allen key screws 3) Allen key

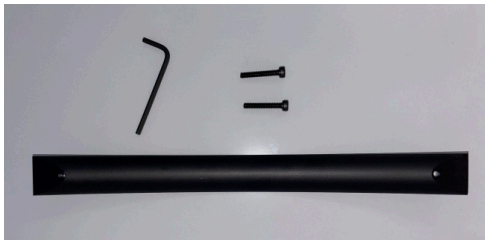

Step 2

Locate the holes into which the screws should be fed through by teasing back the gasket on the back of the door to reveal them.



Step 3

Using the allen key, feed the screw into the hole until it protrudes through the front of the door frame - note it will only protrude about 3mm.



Step 4

Align the door handle holes with the screw tip and thread in the screw. HINT - don't fully screw in the screws until you have located both screws into the handle holes.



Step 5

Tighten the screws until the handle sits neatly on the front of the door and it is not loose.



STAYCOLD INTERNATIONAL